



- F1 = ATC-25
- F2 = ATC-25
- F3 = ATC-20
- F4 = ATC-20
- F5 = ATC-20
- F6 = ATC-20
- F7 = ATC-20
- F8 = ATC-20
- F9 = ATC-20
- F10 = ATC-20
- F11 = ATC-20
- F12 = ATC-20
- F13 = ATC-20
- F14 = ATC-20
- F15 = ATC-20
- F16 = ATC-20
- F17 = ATC-20
- F18 = ATC-20
- F19 = ATC-30
- F20 = ATC-30
- F21 = ATC-20
- F22 = ATC-20
- F23 = ATC-20
- F24 = ATC-20
- F25 = ATC-4
- F26 = ATC-15
- F27 = ATC-15
- F28 = ATC-15
- F29 = ATC-15
- F30 = ATC-15
- F31 = ATC-15
- F32 = ATC-15
- F33 = ATC-20

**Install Relays Rly-1 thru Rly-24, CBIF-12V.**