


R. C. Tronics Incorporated

2573 East Kercher Road
Goshen, Indiana 46528
Toll Free 1-866-457-7790

Phone 1-574-642-3857
Fax 1-574-642-3858
<http://www.rctronics.com>

RCT-01727-A

SCHOOL BUS ELECTRONIC AMBER & RED WARNING CONTROLLER WITH WARNING LIGHT CURRENT MONITOR.

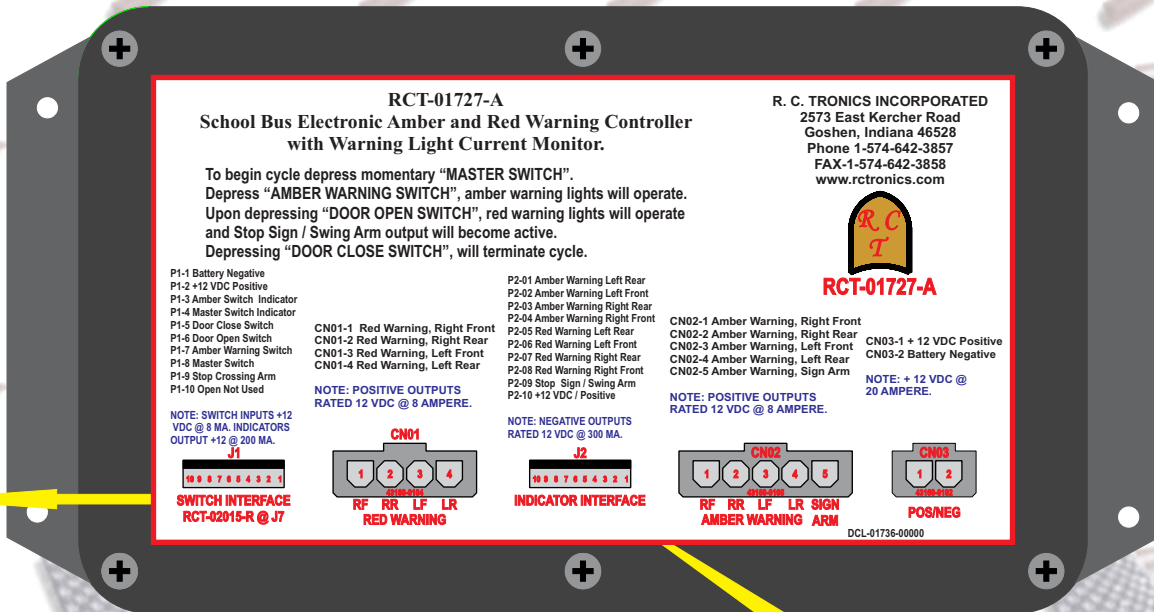

RCT-01729-00000 Indicator Panel,
Use With RCT-01727-A Only.



To Monitor Brake, Turn and Back-Up lights requires RCT-01725 and Indicator Panel RCT-01729-00001.



**INTERFACE FROM RCT-01727-A TO:
RCT-02015-R & ABOVE REVISIONS,
"SCHOOL BUS SYSTEM".**

SEQUENCE OF OPERATION FROM RCT-01919, "DASH SWITCH ARRAY".

- Momentarily depressing, "MASTER" switch will arm system.
- Momentarily depressing, "AMBER WARN" switch will begin operating of the amber warning lights.
- Momentarily inputting to P1-6, "DOOR OPEN" will switch to red warning lights from amber warning lights and output +12 VDC @ CN02-5, "SIGN ARM".
- Momentarily inputting to P1-5, "DOOR CLOSE" will terminate cycle.